


Portable Gate
Installation Instructions

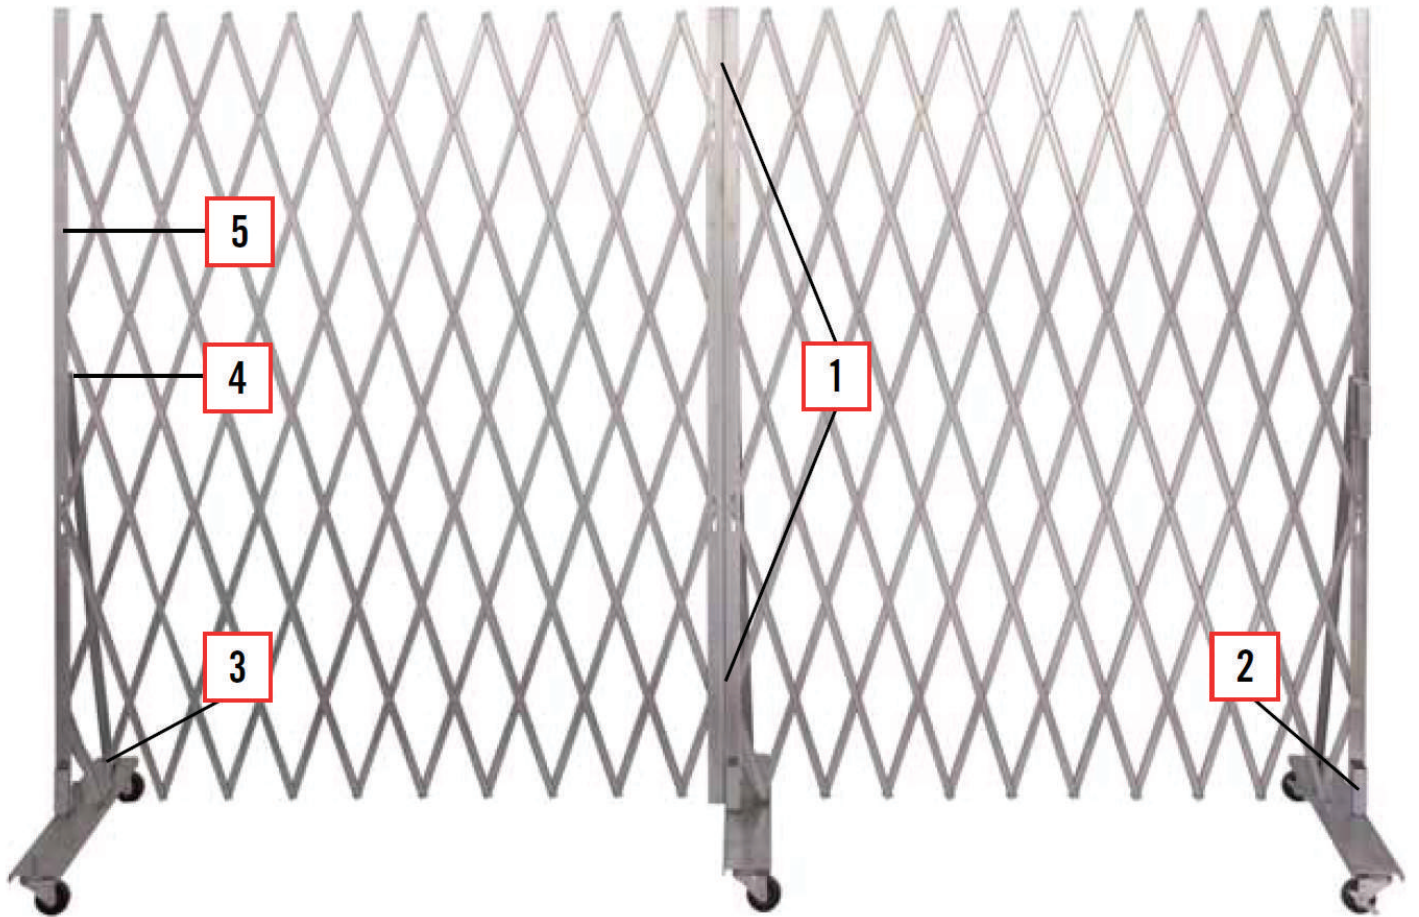

Step 1:
Caution– Pinch Point: Keeps hands and fingers out of moving diamonds of web when handling gate. Bolt both sides of gate together at top and bottom.



Step 2:
Insert each gate end into axle support, insert bolt and tighten.



Step 3:
Thread washer onto each wheel bolt, insert through gate axle wheel hole, thread washer, insert brace, thread and tighten bolt.



Step 4:
Attach top end of braces to to each gate vertical ends.
Portable Gate Add-on:
Repeat steps 1-4 for each 6 foot add-on gate.



Collapse gate, lower gate axle locking bars into pins and roll gate to desired location.



Step 5:
Align wall locking bar so that both padlock holes align with each other. Mount to wall with hardware. Repeat on opposite end.